


MINI-PTAC (TTW) WALL SLEEVE INSTALLATION MANUAL

Model Number:

ACiQ-TTW-WS

To Be Installed With:

ACiQ-08TTW

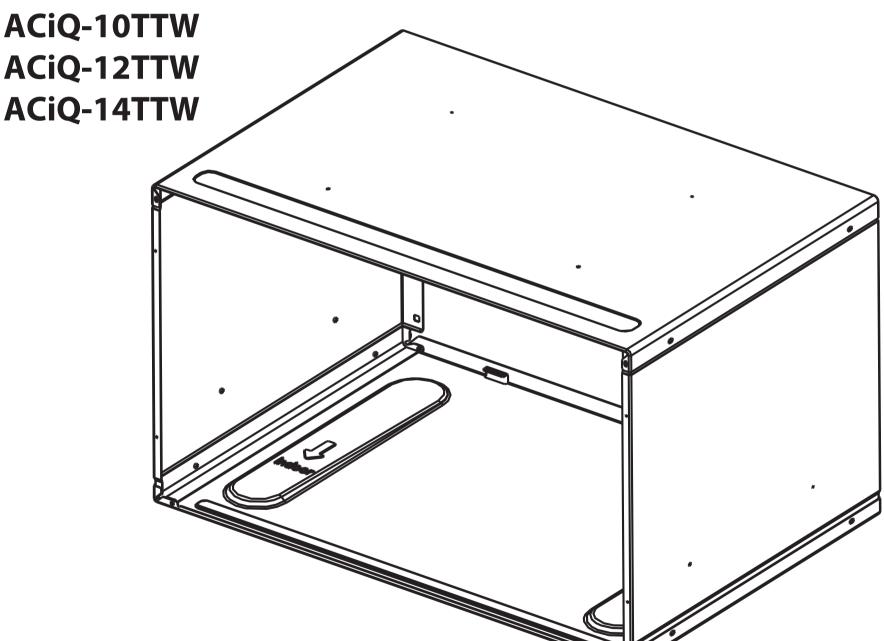

WARNING: <u>DO NOT destroy or lose this manual.</u> Please read the manual thoroughly. Also, store the manual in a place that allows for easy retrieval and future reference. As a result of continuous product improvement, the specification and design of this product are subject to change without advanced notice. Consult your manufacturer or your dealer for further details regarding this product. The images and illustrations within this this manual are for reference only. The actual shape and size of your product may vary.


VERSION DATE: 8-06-25


THROUGH-THE-WALL AIR CONDITIONER SLEEVE INSTALLATION INSTRUCTIONS


HOW TO ASSEMBLE THE WALL SLEEVE

SLEEVE HARDWARE

ITEM	DESCRIPTION	QT'Y
1	TOP PANEL	1
2	BOTTOM PANEL	1
3	LEFT SIDE PANEL	1
4	RIGHT SIDE PANEL	1
5	FRONT COVER PANEL	1
6	REAR COVER PANEL	1
7	BRACKET	4
8	CLASP FOR SLEEVE	4
9	SCREW ST3.9*10	28
10	WASHER	8

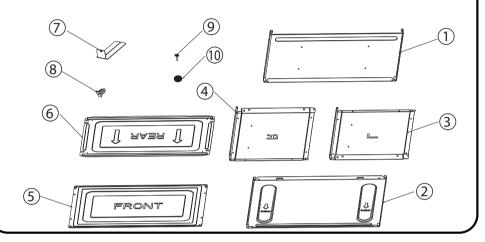

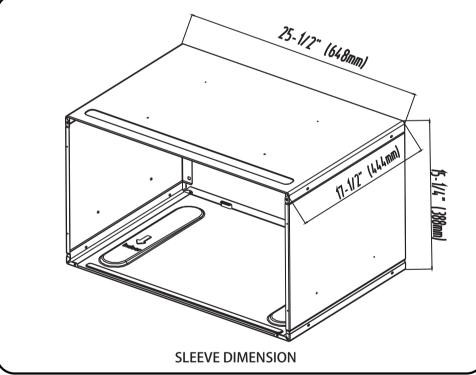

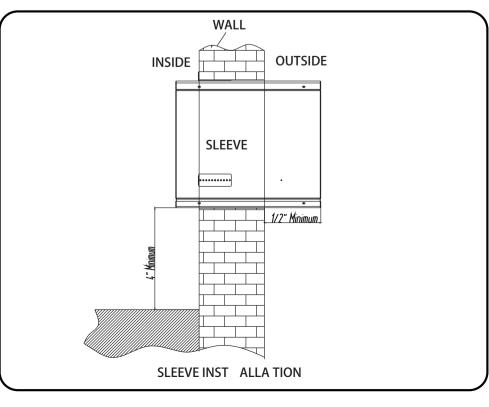


INSTALL THE UNIT

- Remove the old air conditioner from the existing wall sleeve and remove the existing wall sleeve.
- Prepare and install the new wall sleeve into the wall opening.
- The wall sleeve must be fastened in the wall secuerly before installing the new air conditioner.
- Keep the cover panels for later use to protect the sleeve from rainy or windy weater.
- To avoid distortion to the front panel of the air conditioner, the sleeve should be installed at a distance of 4"minimum from heating source. (e.g. Baseboard heating, radiator.etc.)
- After sleeve has been installed, caulk where necessary entire perimeter around exterior wall opening and sleeve. Use a good grade of caulking compound to seal all cracks against air and water infiltration.
- The rear grill and washer scerws should be kept well until the air conditioner is installed.


ASSEMBLE THE WALL SLEEVE

 Use four screws to fasten the side panels on the bottom panel as shown below.


NOTE:The arrow marks on the bottom panel indicate the direction of indoor side

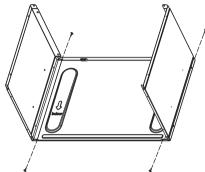


 Place the top panel on the top and fasten with four screws as shown below.

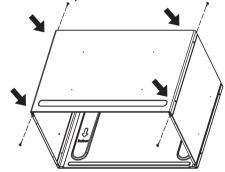

• Insert the four clasps for sleeve into the quadrate holes in the side panels as shown below.

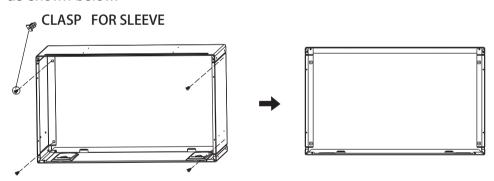


 Insert the louvered rear grille or the expanded rear grille (packed with air conditioner you purchased) and fasten with 4 washer screws as shown below.

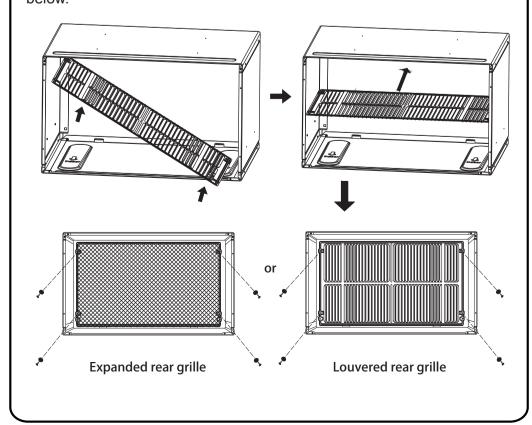


ASSEMBLE THE WALL SLEEVE (CONTINUED)

 Install two brackets on the top and one bracket on each side of the sleeve, fasten with four screws. There are two methods for your choice to install the brackets as shown in FIG. A and FIG.B.


NOTE: Choose anyone hole in the bracket as you prefer to fasten the screws on the sleeve.

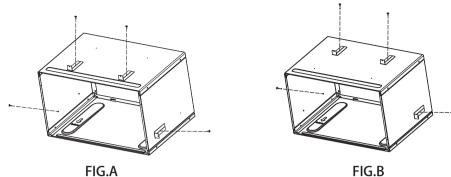

 NOTE:To improve the firmness of the sleeve, it is recommended to install 8 more screws as shown below.

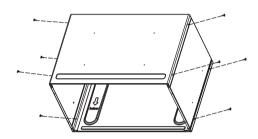



 First put the assembled sleeve into the wall opening as shown below, then place the air conditioner into the sleeve.

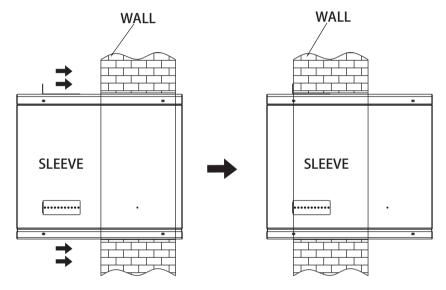

INSTALL THE COVER PANELS(when not using air conditioner for a long time.)

- To install cover panel at the back of sleeve, first remove air conditioner from sleeve.
- Take the louvered rear grille or the expanded rear grille out by loosening the four washer screws as shown in FIG.C.
- From the inside of the sleeve,insert the rear cover panel and re-insert the four washer screws through the panel,then tighten them as shown in FIG.D and FIG.E.
- Use the front panel to cover the front of the sleeve. Fasten with 4 screws as shown in FIG.F.

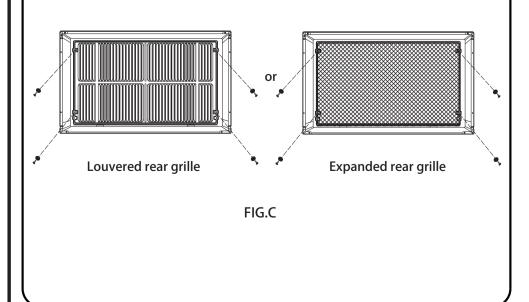

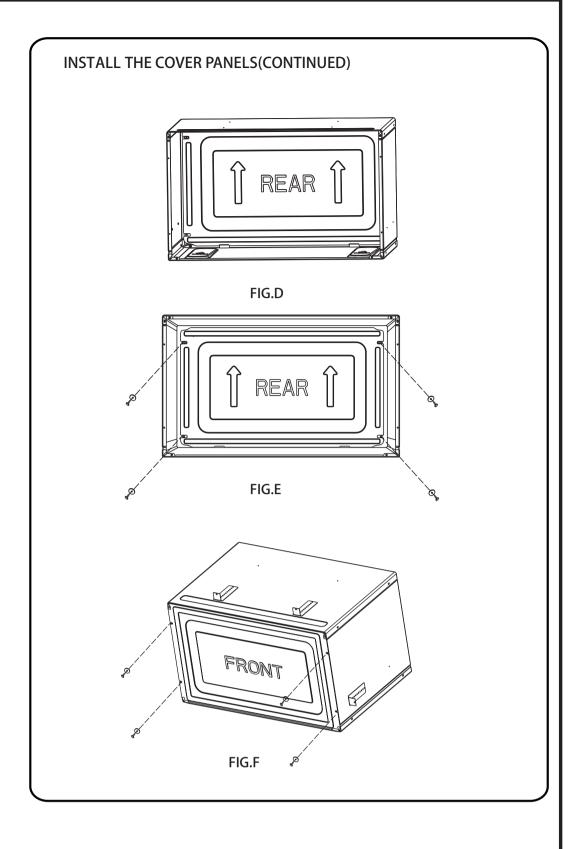

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details. Any updates to the manual will be uploaded to the service website, please check for the latest version.